


## 600 CFI Fuel Tank / Fuel Supply

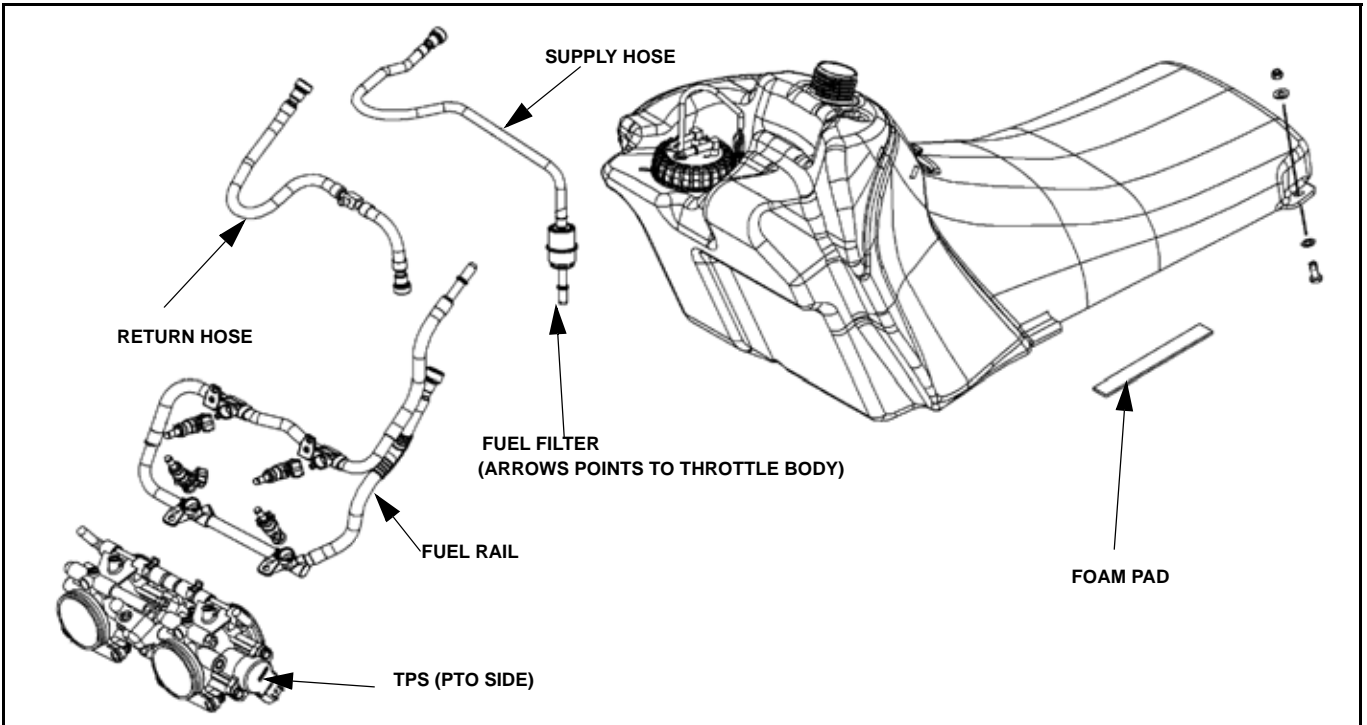

4

## 600 CFI Pump / Sender Specifications

	$\Omega$	PINS	COLOR	FUNCTION
Full	$\leq 8 \pm 1$	1	Red	Pump PWR
1/2	$40 \pm 3$	2	WHT/BLU	Sender
Empty	$85 \pm 4$	3	Black	Ground
		4	Pink/Black	Sender

## 600 CFI Fuel Pump Replacement

**⚠ WARNING**

Only the 2007 600 CFI models use the drop-in style fuel pump.

1. Siphon the fuel out of the fuel tank into a suitable container.
2. Remove the console and the seat assembly.
3. Disconnect the positive (+) battery cable from the battery if applicable.
4. Remove the fasteners securing the fuel tank to the tunnel.
5. Bleed the pressure from the fuel rail. See "Fuel Rail Bleeding" on page 4.20.
6. Lift and move the tank back to gain access to the fuel lines.
7. Remove the fuel supply and return hoses from the top of the tank.
8. Disconnect the wiring harness, then remove the tank from the snowmobile. Place tank in a well-ventilated area.

