

TABLE OF CONTENTS

	Page
SECTION 1	
GENERAL	1-1
Safety First	1-1
Model & Serial Number Designations	1-2
Model & Serial Number Label & Tech Sheet Locations	1-3
SECTION 2	
INSTALLATION INFORMATION	2-1
Installation Requirements	2-1
Installation Instructions	2-5
SECTION 3	
PRODUCT OPERATION	3-1
Theory Of Operation	3-1
Customer Directions	3-3
SECTION 4	
COMPONENT ACCESS	4-1
Component Locations	4-1
Removing The User Interface Board	4-2
Removing The Water Inlet/Dispenser Valve Assembly, Power Supply Cord, & Machine/Motor Controller	4-3
Removing A Dispenser, The Fresh Fill Inlet Valve, And The Lid Lock	4-5
Removing The Basket, Basket Hub, & Lint Filter	4-8
Removing The Drain And Recirculation Pumps	4-10
Removing The Drive Motor	4-12
Removing The Tub	4-14
SECTION 5	
COMPONENT TESTING	5-1
Water Inlet/Dispenser Valve Assembly	5-1
Drain Pump	5-2
Recirculation Pump	5-2
Lid Lock	5-3
Drive Motor Stator	5-4
SECTION 6	
DIAGNOSTICS & TROUBLESHOOTING	6-1
Diagnostics	6-1
Troubleshooting	6-8
SECTION 7	
WIRING DIAGRAM	7-1