

HOW TO USE THIS MANUAL

Follow the Competition Maintenance Schedule recommendations (Page 3-2) to ensure that the FL350R is always in peak operating condition.

Sections 1 through 3 apply to the whole FL350R, while sections 4 through 13 describe parts of the FL350R, grouped according to location.

Find the section you want on this page, then turn to the table of contents on page 1 of that section.

Most sections start with an assembly or system illustration and specifications, torque values, general instructions, tools and troubleshooting for the section. The subsequent pages give detailed procedures for the section.

If you don't know the source of the trouble, see section 18, Troubleshooting.

All information, illustrations, directions and specifications included in this publication are based on the latest product information available at the time of approval for printing.

HONDA MOTOR CO., LTD. reserves the right to make changes at any time without notice and without incurring any obligation whatever.

No part of this publication may be reproduced without written permission.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATIONS OFFICE

CONTENTS

	GENERAL INFORMATION	1
	LUBRICATION	2
	MAINTENANCE	3
ENGINE	FUEL SYSTEM	4
	ENGINE REMOVAL/INSTALLATION	5
	CYLINDER HEAD/CYLINDER/PISTON	6
	RECOIL STARTER/ALTERNATOR/ STARTER MOTOR	7
	BALANCER GEAR/CRANKSHAFT	8
	TRANSMISSION/BELT CONVERTER	9
CHASSIS	FRONT WHEEL/SUSPENSION/ STEERING	10
	REAR WHEEL/SUSPENSION/ RADIUS ARM	11
	BRAKES	12
	FRAME PARTS/EXHAUST MUFFLER	13
ELECTRICAL	IGNITION SYSTEM	14
	BATTERY/CHARGING SYSTEM	15
	STARTER SYSTEM	16
	LIGHTS/SWITCHES	17
	TROUBLESHOOTING	18
	INDEX	19