



4. Replace:

- V-belt

\*\*\*\*\*

**Replacing steps:**

- Install the bolts ① (90101-06016) into the secondary fixed sheave hold.

**NOTE:**

Tightening the bolts ① will push the secondary sliding sheave away, causing the gap between the secondary fixed and sliding sheaves to widen.

- Remove the V-belt ① from the primary sheave and secondary sheave.

- Install the V-belt.

**NOTE:**

Install the V-belt so that its arrow faces the direction shown in the illustration.

- Remove the bolts.

\*\*\*\*\*