

EBS00297

REMOVING THE CLUTCH

1. Remove:
 - clutch cover ①

NOTE:

Loosen each bolt 1/4 of a turn at a time, in stages and in a crisscross pattern. After all of the bolts are fully loosened, remove them.

2. Straighten the lock washer tab.

3. Loosen:
 - clutch boss nut ①

NOTE:

While holding the clutch boss ② with the universal clutch holder ③, loosen the clutch boss nut.



Universal clutch holder
P/N. YM-91042, 90890-04086

EBS00300

CHECKING THE FRICTION PLATES

The following procedure applies to all of the friction plates.

1. Check:
 - friction plate 1
 - friction plate 2


Damage/wear → Replace the friction plates as a set.

2. Measure:
 - friction plate 1 thickness
 - friction plate 2 thickness

Out of specification → Replace the friction plates as a set.

NOTE:

Measure the friction plate at four places.

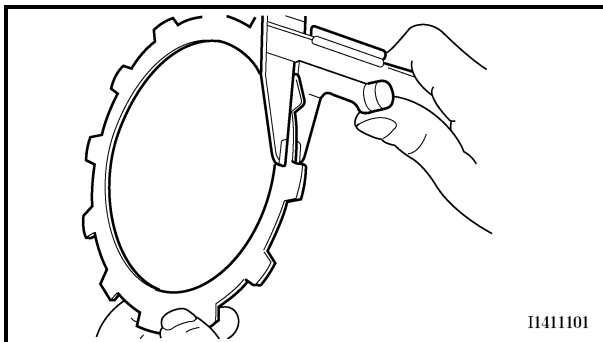

Friction plate 1 thickness
2.9 ~ 3.1 mm (0.114 ~ 0.122 in)
<Limit>: 2.8 mm (0.110 in)
Friction plate 2 thickness
2.9 ~ 3.1 mm (0.114 ~ 0.122 in)
<Limit>: 2.8 mm (0.110 in)