


---

## Procedure

**Note:** To remove the power supply fan, you must first move the power supply out of the way; you do not, however, have to remove the power supply entirely from the enclosure.

1. Using a short-handled, magnetized 2.5 mm hex screwdriver, remove the four power supply mounting screws from the bottom of the media shelf.

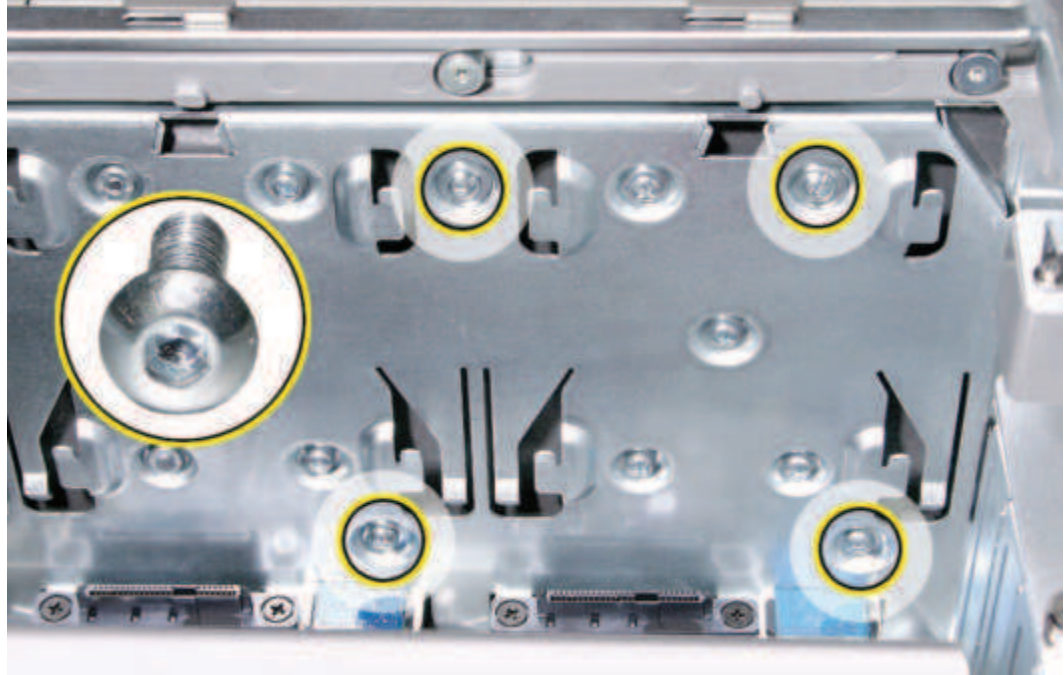

2. Depress the upper right corner of the power supply and slide the power supply toward the front of the computer.

