


---

## Procedure

1. Disconnect the optical drive ribbon cable from the logic board and move the cable out of the way.
2. Disconnect the front panel board power cable from the front panel board and move it out of the way.
3. Disconnect the power button cable from the front panel board.

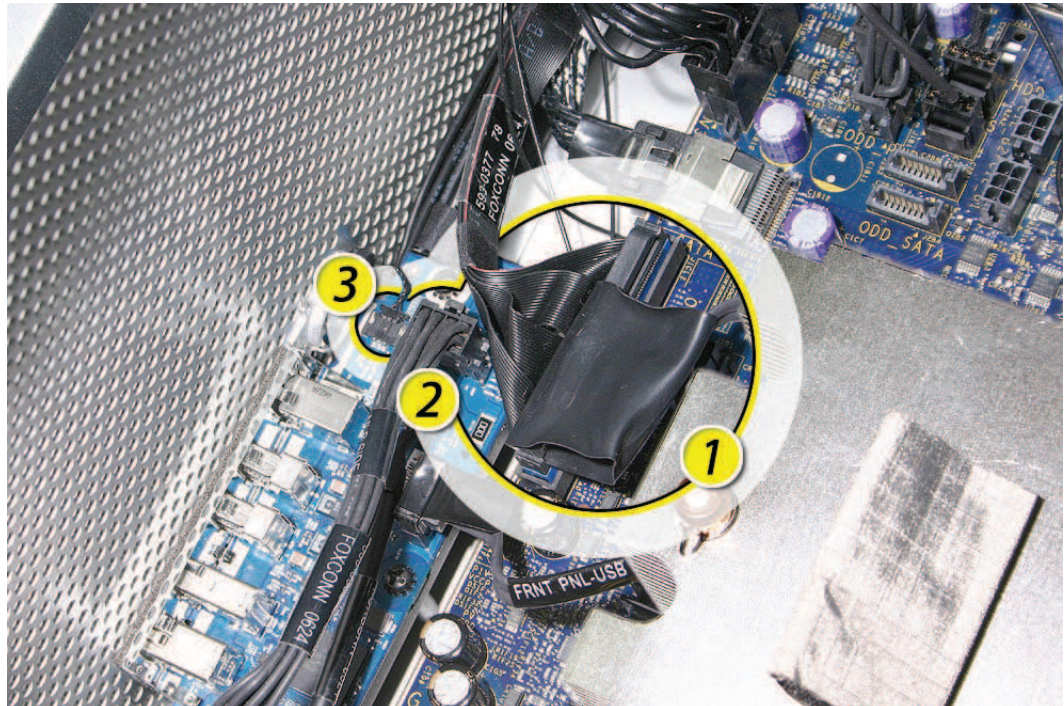

4. Lay the computer so that the front panel is facing down.