

Models Covered in This Service Manual

12-Volt Bow Mount Foot Steer

BF2T
BFL2T
BFL2PD
HBF2
HBFL2

12-Volt Bow Mount Hand Steer

BHL2T

12-Volt Transom Mount Hand Steer

H2T
H2TS
H2TT

12/24-Volt Bow Mount Foot Steer

BFL4TM

24-Volt Bow Mount Foot Steer – Pulse Width Modulation

BF4P
BFL4P
BFX4P
BF4TP
BFL4TP
BFX4TP

12/24-Volt Bow Mount Hand Steer

HB4TS
BHL4T

12/24-Volt Transom Mount Hand Steer

H4TS