


Apply grease to the bearing and inside of the inboard joint.


Install the inboard joint to the drive shaft.
Install the stop ring in the joint groove.

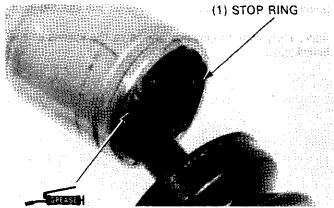

Pack the boots with grease and pull them on the joints.

GREASE CAPACITY:

Inboard boot: 90-110 grams (3.2-3.9 oz)
Outboard boot: 75-95 grams (2.6-3.4 oz)

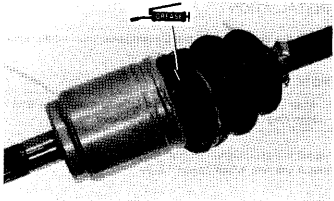

Adjust the length of the drive shaft to the figure given below.

DRIVE SHAFT LENGTH: 452-462 mm (17.8-18.2 in)



Secure the new boot bands as follows:

1. Bend down the tab of the boot band.
2. Secure the bent down tab with the locking clips and tap them with a plastic hammer.

NOTE

- Be careful not to damage the boot.
- Install the bands with their tabs facing rearward.

